


KITFOX INSTALLATION

(LOOKING AFT THROUGH CO-PILOTS SEAT)

DRAWING BY
JEFF PELTIER

- ① Cut and install Aluminum Rails to cross tubes as shown. Space Rails so that Modular Mount on unit fits between Rails. See Drwg.#1175 for Frame Band fabrication.
- ② Route Activation Housing Assy. up aircraft frame tubing, securing routing with plastic tie-wraps provided in kit.
- ③ Install Handle Assy. to overhead tubes in location accessible to both occupants.
- ④ NOTE: Flaperon actuating tube may have to be disconnected for wing stowage.

Remember to take photos of installation and send them in to BRS for review!

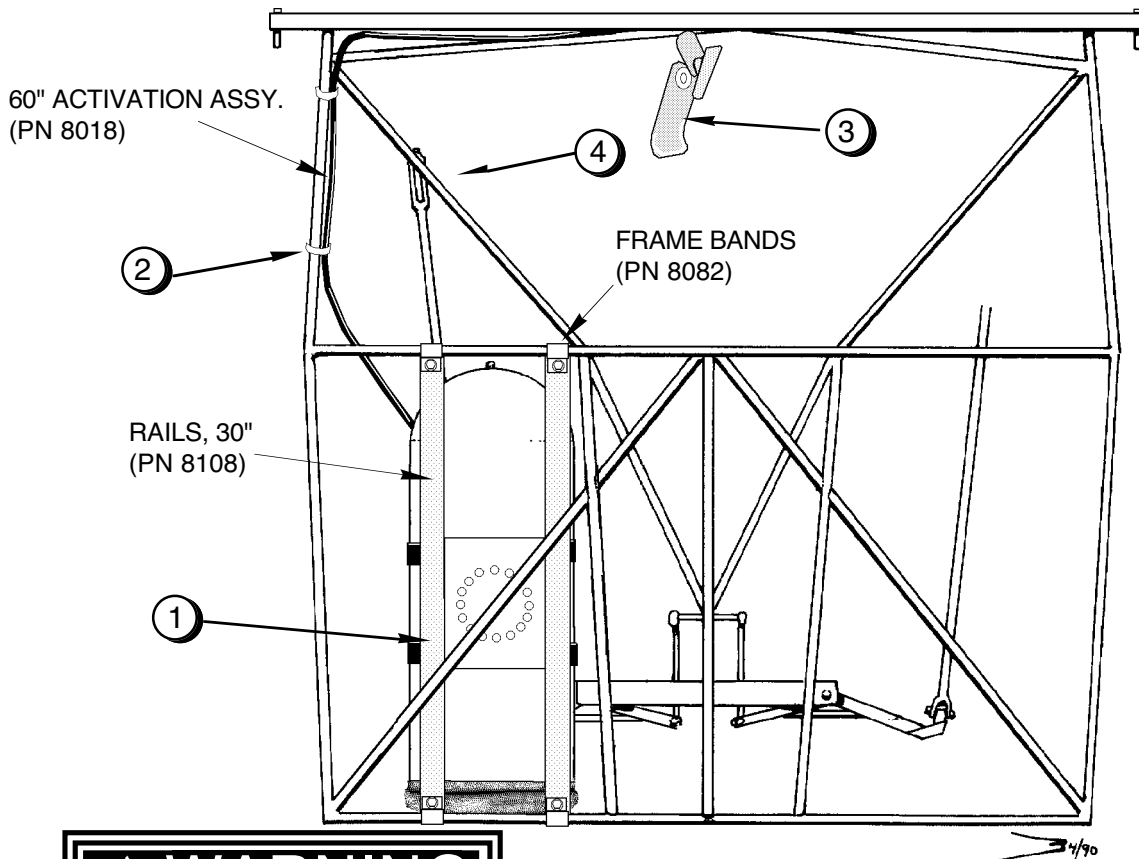

⚠ WARNING
REMEMBER TO
RECALCULATE FOR
WEIGHT AND BALANCE